




Operating Instructions

1. Selecting and Cancelling Tracks
2. Adjusting Jukebox Internal Volume
3. Connecting an iPod or iPhone

WURLITZER®

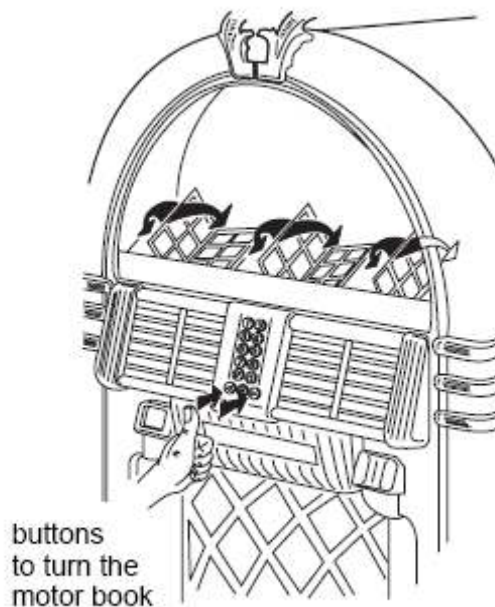


Track selection

How to select a track

If credit exists or free play is set you can select tracks by means of the buttons 0 - 9 on the keyboard. First enter the number of the CD with two digits, then the track with two digits too. Example: CD 2, track 9: Enter 0 - 2 - 0 - 9 (Exception: CD 100 = 00.)

The button R

You can delete wrongly entered numbers up to the third digit by means of the button R (Reset). But after having entered the fourth digit the jukebox stores and executes a selection. By pressing the button R the available credit will be displayed for a few seconds.

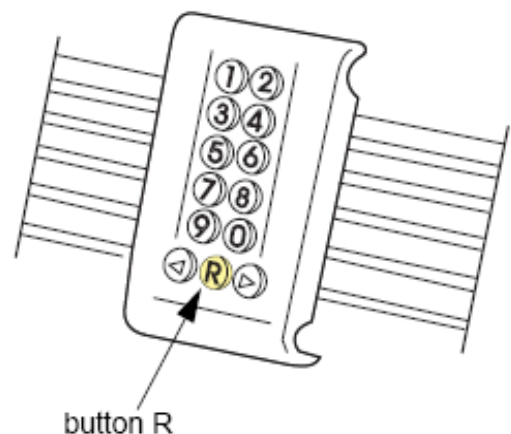

The display flashes

After entering the fourth digit of a selection the jukebox starts to search and play the selected CD immediately. If the display flashes the entered selection was not valid. Check:



- if credit is available or
- if the selection is higher than the programmed number of CDs in the carrier

If you select a higher track number than available on a CD the jukebox overcounts the tracks and starts at the beginning.


Example: CD 03 contains 17 tracks. But selected track is 0 - 3 - 1 - 9. The jukebox plays track 1 on CD 03.

The Jukebox Memory 6 Song Rule

We have programmed the jukebox to only allow up to 6 songs to be pre-programmed into its memory at any one time. This restriction is in place to stop younger guests "hogging" the music and selecting songs you would not want to hear all night.

I do not like this track - the button CANCEL


If you do not like a track you can cancel it by pressing the button 'CANCEL' at the rear side of the jukebox or at the remote control. The jukebox stops playing or plays the next track if a selection has already been made.

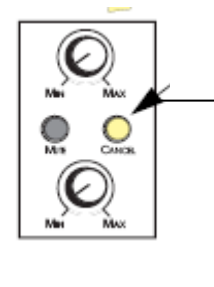

The Cancel Button is located on the rear of the Jukebox
You may have to cancel up to 5 times to clear all selections

Setting the Jukebox Internal Volume (Without Accessory Pack)

Locate the volume buttons on the rear of the Jukebox and turn as desired

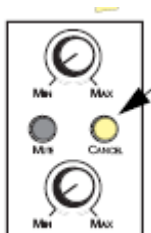

The volume of the jukeboxes own internal speakers and external speakers (when hired) are independently controlled. Turn the volume buttons to the desired volume, always avoid setting to max.

Optional Extra - Connecting an iPod or iPhone


When using the optional iPod / iPhone accessory pack both the Jukebox music and iPod music is routed through a pair of external speakers.

Dock your own iPod / iPhone into the Audio Mixer as shown below and simply play the playlist or song from your iPod / iPhone and as normal.

To select the iPod / iPhone music instead of the jukebox music (and indeed vice-versa) move the two audio mixer sliders up or down, setting the volume to the desired level on one slider and the other slider to off.



iPod Dock

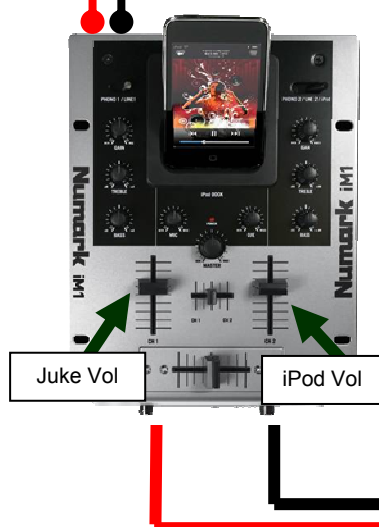

Notes for iPhone5
We leave a small adaptor with the mixer so you can connect your iPhone5 into the 30 Pin Connector

Notes for Laptop, Android, Tablet
When requested, we will leave a white audio lead connected into the mixer that can connect directly into your devices headphone socket.

The "Line 2" Input switch on CH2 must be selected to play the device.

Then use the "iPod" volume control slider to set desired volume

2 x External Speakers



Diagram Not to Scale